


# PARKING BRAKE LEVER

## COMPONENTS

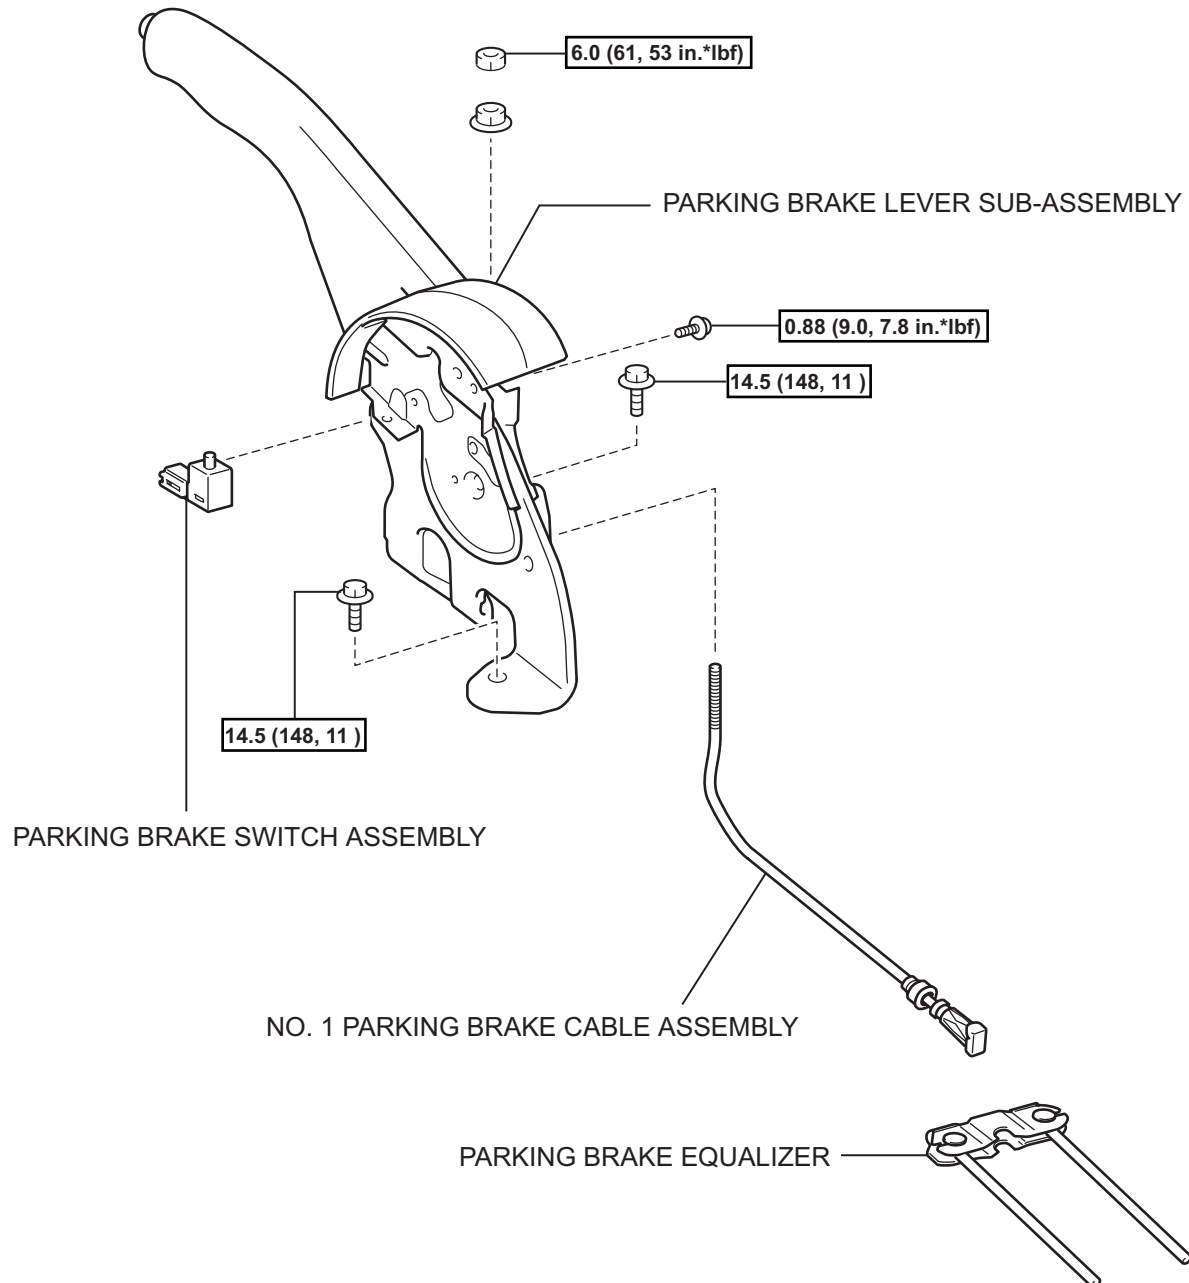

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

PB

ON-VEHICLE INSPECTION

1. CHECK PARKING BRAKE SWITCH ASSEMBLY

- (a) Remove the rear console box (see page IP-16).  
HINT:


Refer to the procedures from the removal of the No. 1 console upper panel garnish up until the removal of the rear console box sub-assembly.

- (b) Disconnect the parking brake switch connector.
- (c) Measure the resistance of the switch.

Standard resistance

Tester Connection	Condition	Specified Condition
1 - Body ground	Parking brake switch ON (Switch pin released)	Below 1 Ω
1 - Body ground	Parking brake switch OFF (Switch pin pushed in)	10 kΩ or higher

If the result is not as specified, replace the switch assembly.

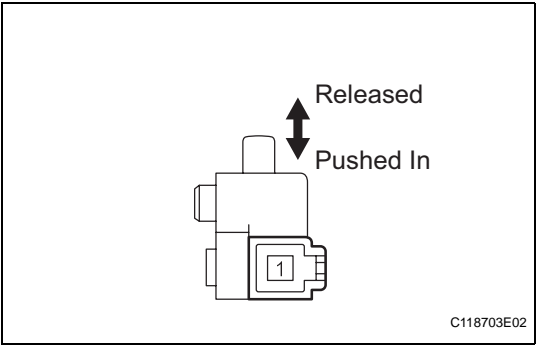

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE REAR CONSOLE BOX SUB-ASSEMBLY**



- (a) Remove the rear console box (see page [IP-16](#)).

**HINT:**


Refer to the procedures from the removal of the No. 1 console upper panel garnish up until the removal of the rear console box sub-assembly.

3. **REMOVE PARKING BRAKE LEVER SUB-ASSEMBLY**

- (a) Disconnect the parking brake switch connector.
- (b) Remove the lock nut and wire adjusting nut.

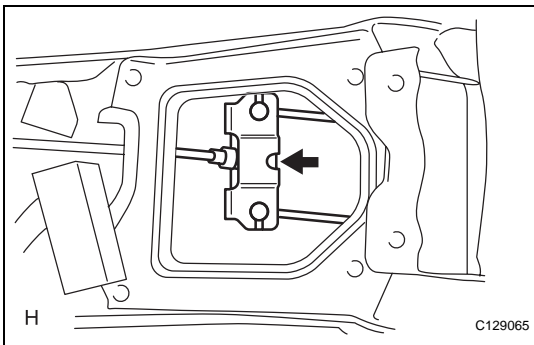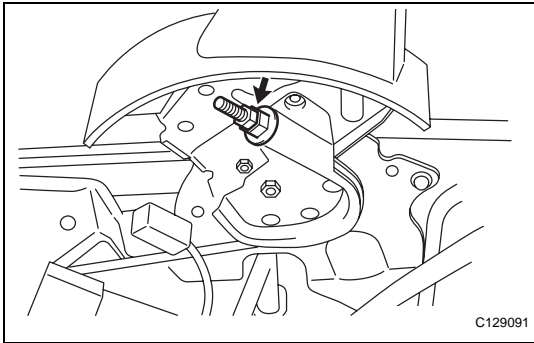

- (c) Disconnect the No. 1 parking brake cable from the parking brake equalizer.

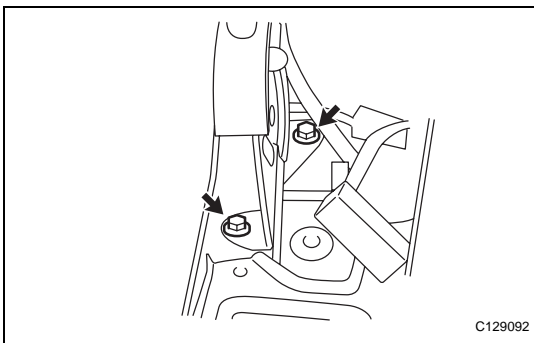

- (d) Remove the 2 bolts and parking brake lever (with the No. 1 parking brake cable).

4. **REMOVE NO. 1 PARKING BRAKE CABLE ASSEMBLY**

- (a) Disconnect the cable from the lever.

5. **REMOVE PARKING BRAKE SWITCH ASSEMBLY**

- (a) Remove the screw and switch from the lever.

## INSTALLATION

### 1. INSTALL PARKING BRAKE SWITCH ASSEMBLY

- (a) Install the parking brake switch with the screw.

**Torque: 0.88 N\*m (9.0 kgf\*cm, 7.8 in.\*lbf)**




### 2. INSTALL NO. 1 PARKING BRAKE CABLE ASSEMBLY

- (a) Connect the cable to the lever.

### 3. INSTALL PARKING BRAKE LEVER SUB-ASSEMBLY

- (a) Install the parking brake lever (with the No. 1 parking brake cable) with the 2 bolts.

**Torque: 14.5 N\*m (148 kgf\*cm, 11 ft.\*lbf)**

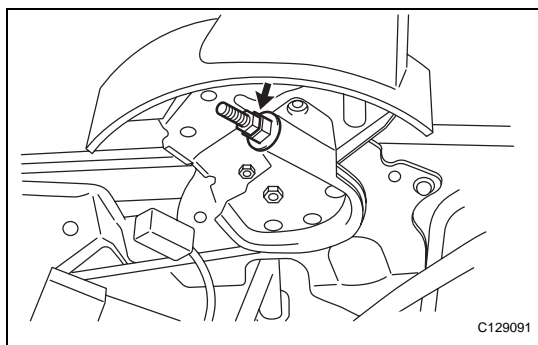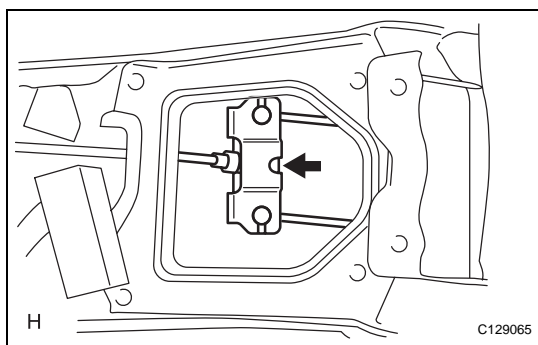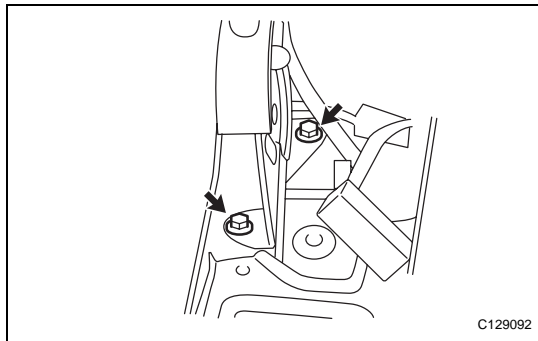

- (b) Connect the No. 1 parking brake cable to the parking brake equalizer.

- (c) Temporarily install the wire adjusting nut and lock nut.

- (d) Connect the parking brake switch connector.

### 4. CHECK PARKING BRAKE LEVER TRAVEL (See page [PB-1](#))

### 5. ADJUST PARKING BRAKE LEVER TRAVEL (See page [PB-2](#))

### 6. INSTALL REAR CONSOLE BOX SUB-ASSEMBLY

- (a) Install the rear console box (see page [IP-23](#)).

**HINT:**

Refer to the procedures from the installation of the rear console box sub-assembly up until the installation of the No. 1 console upper panel garnish.

### 7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL